


DOLBY Switch Connections

Modified on
02/21/2005

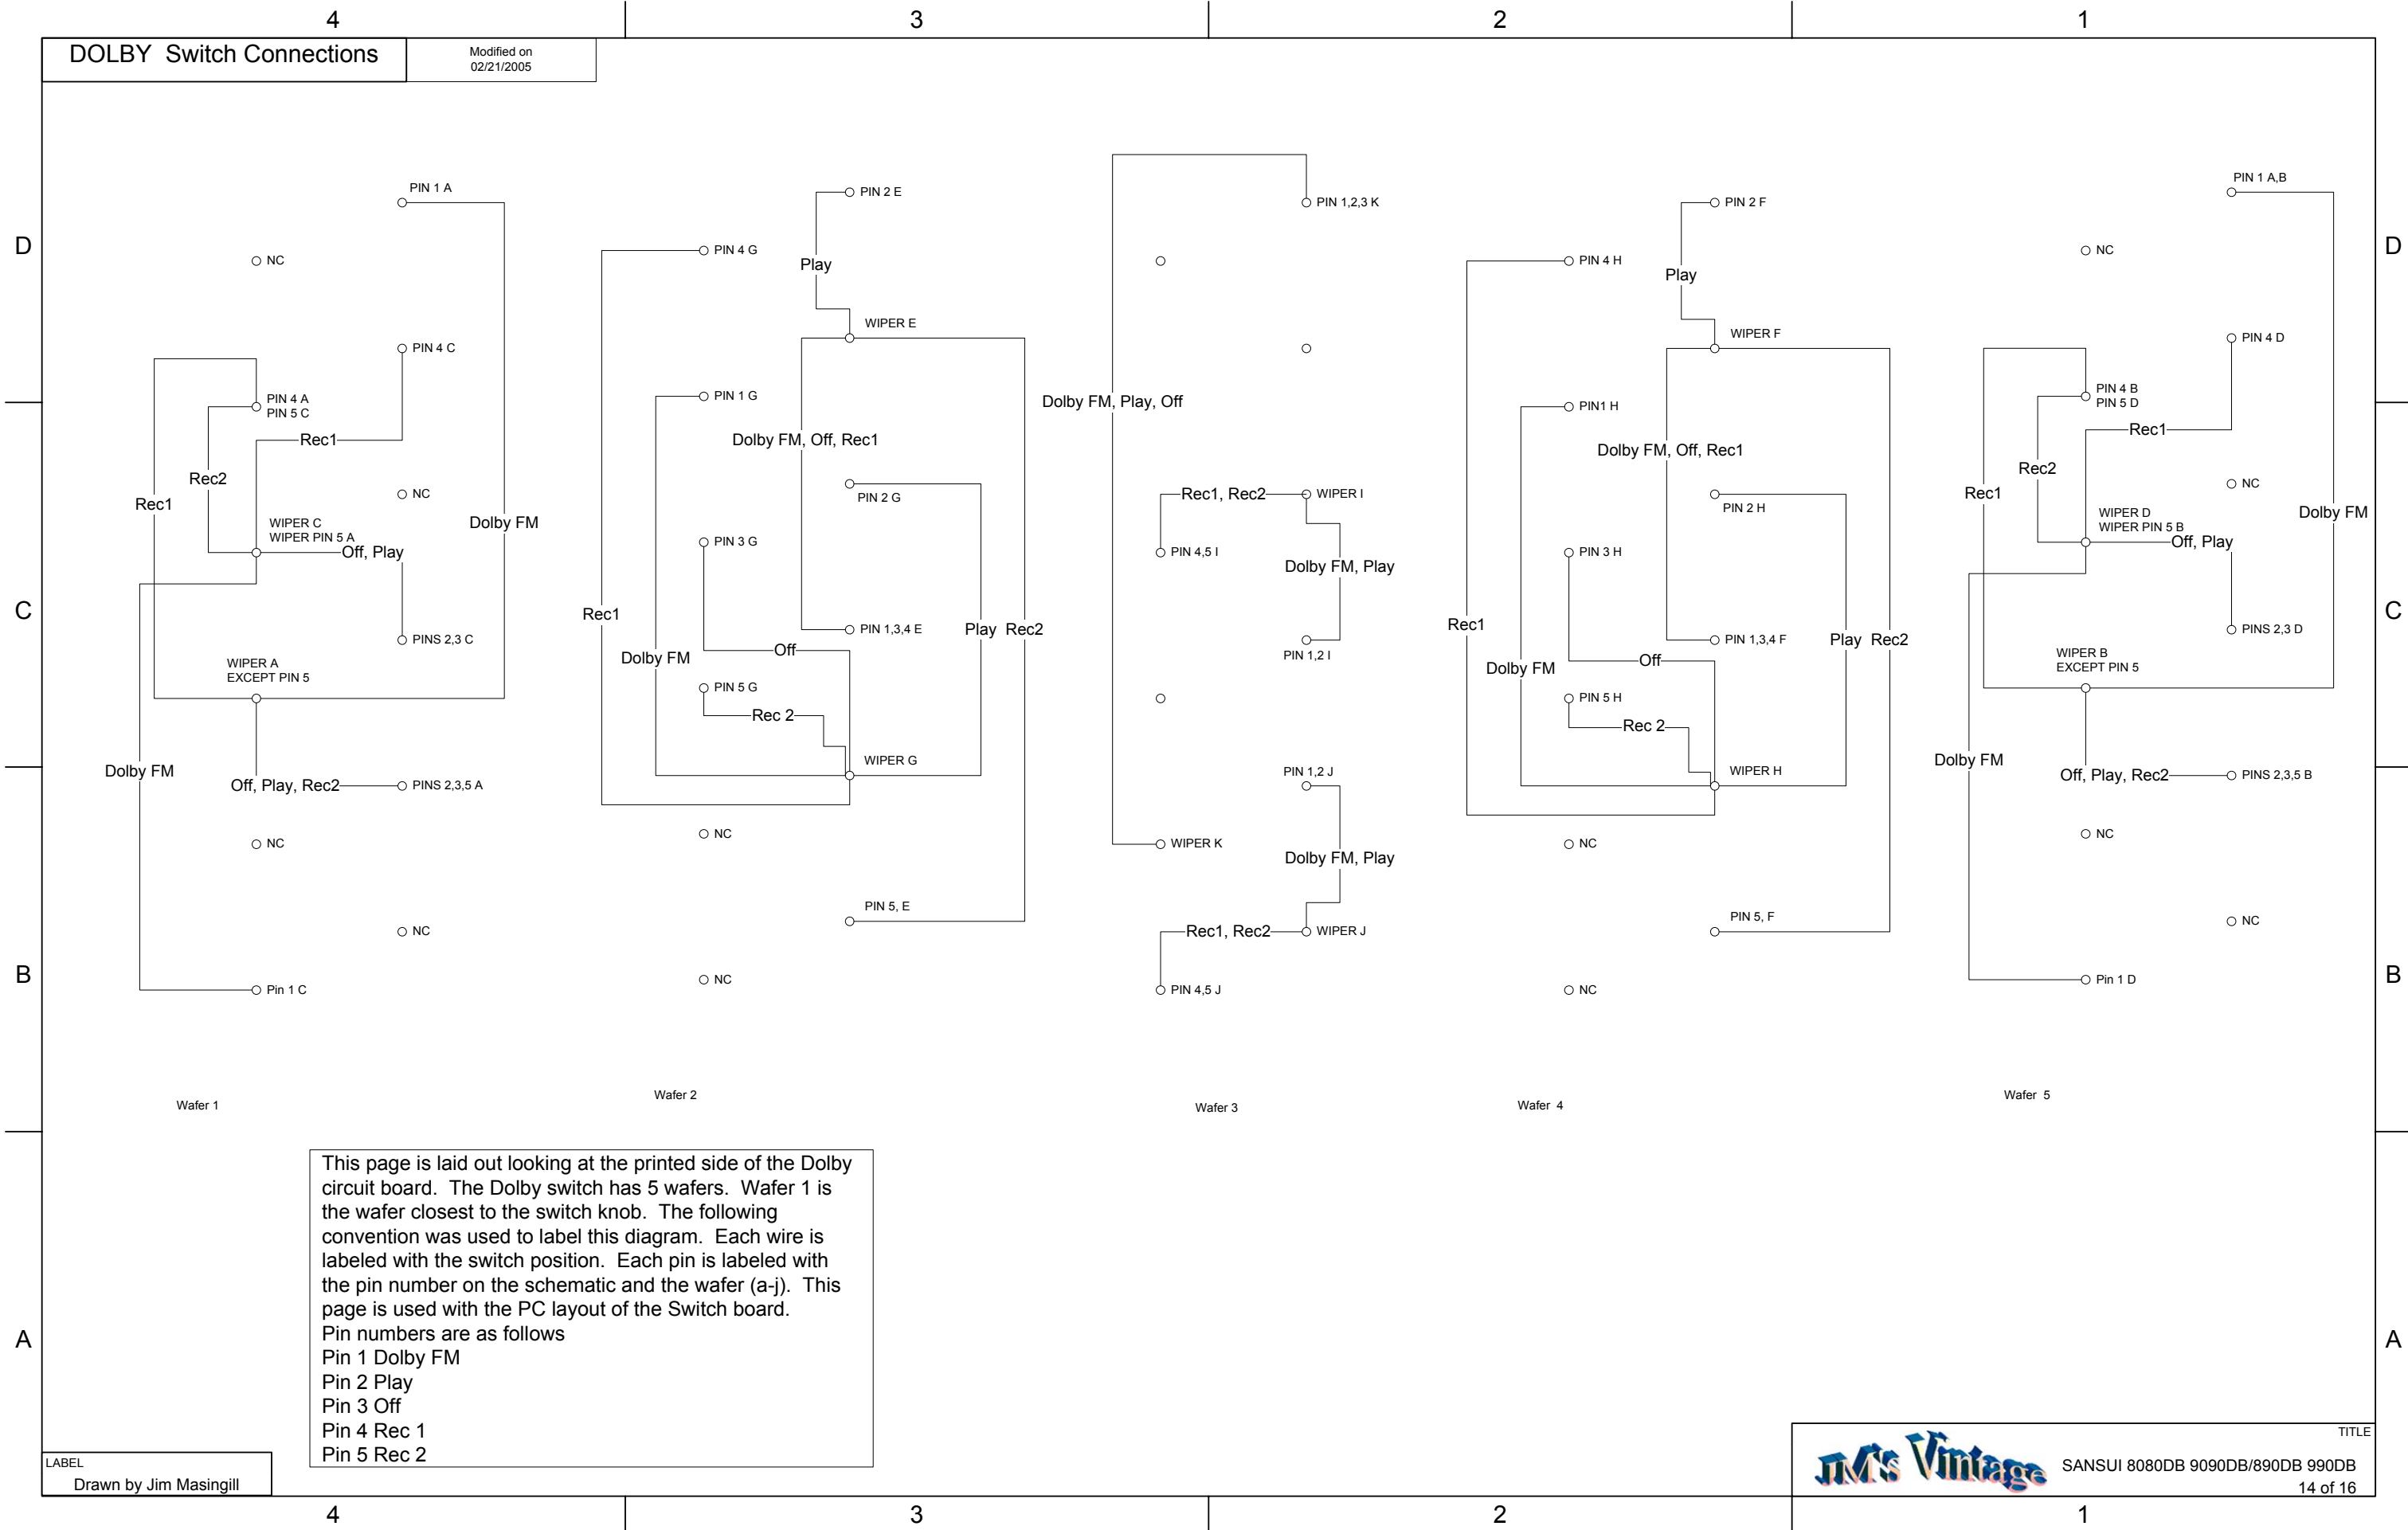


This page is laid out looking at the printed side of the Dolby circuit board. The Dolby switch has 5 wafers. Wafer 1 is the wafer closest to the switch knob. The following convention was used to label this diagram. Each wire is labeled with the switch position. Each pin is labeled with the pin number on the schematic and the wafer (a-j). This page is used with the PC layout of the Switch board.

Pin numbers are as follows
 Pin 1 Dolby FM
 Pin 2 Play
 Pin 3 Off
 Pin 4 Rec 1
 Pin 5 Rec 2

LABEL
Drawn by Jim Masingill

Switch Board Connections


Modified on
12/20/2004

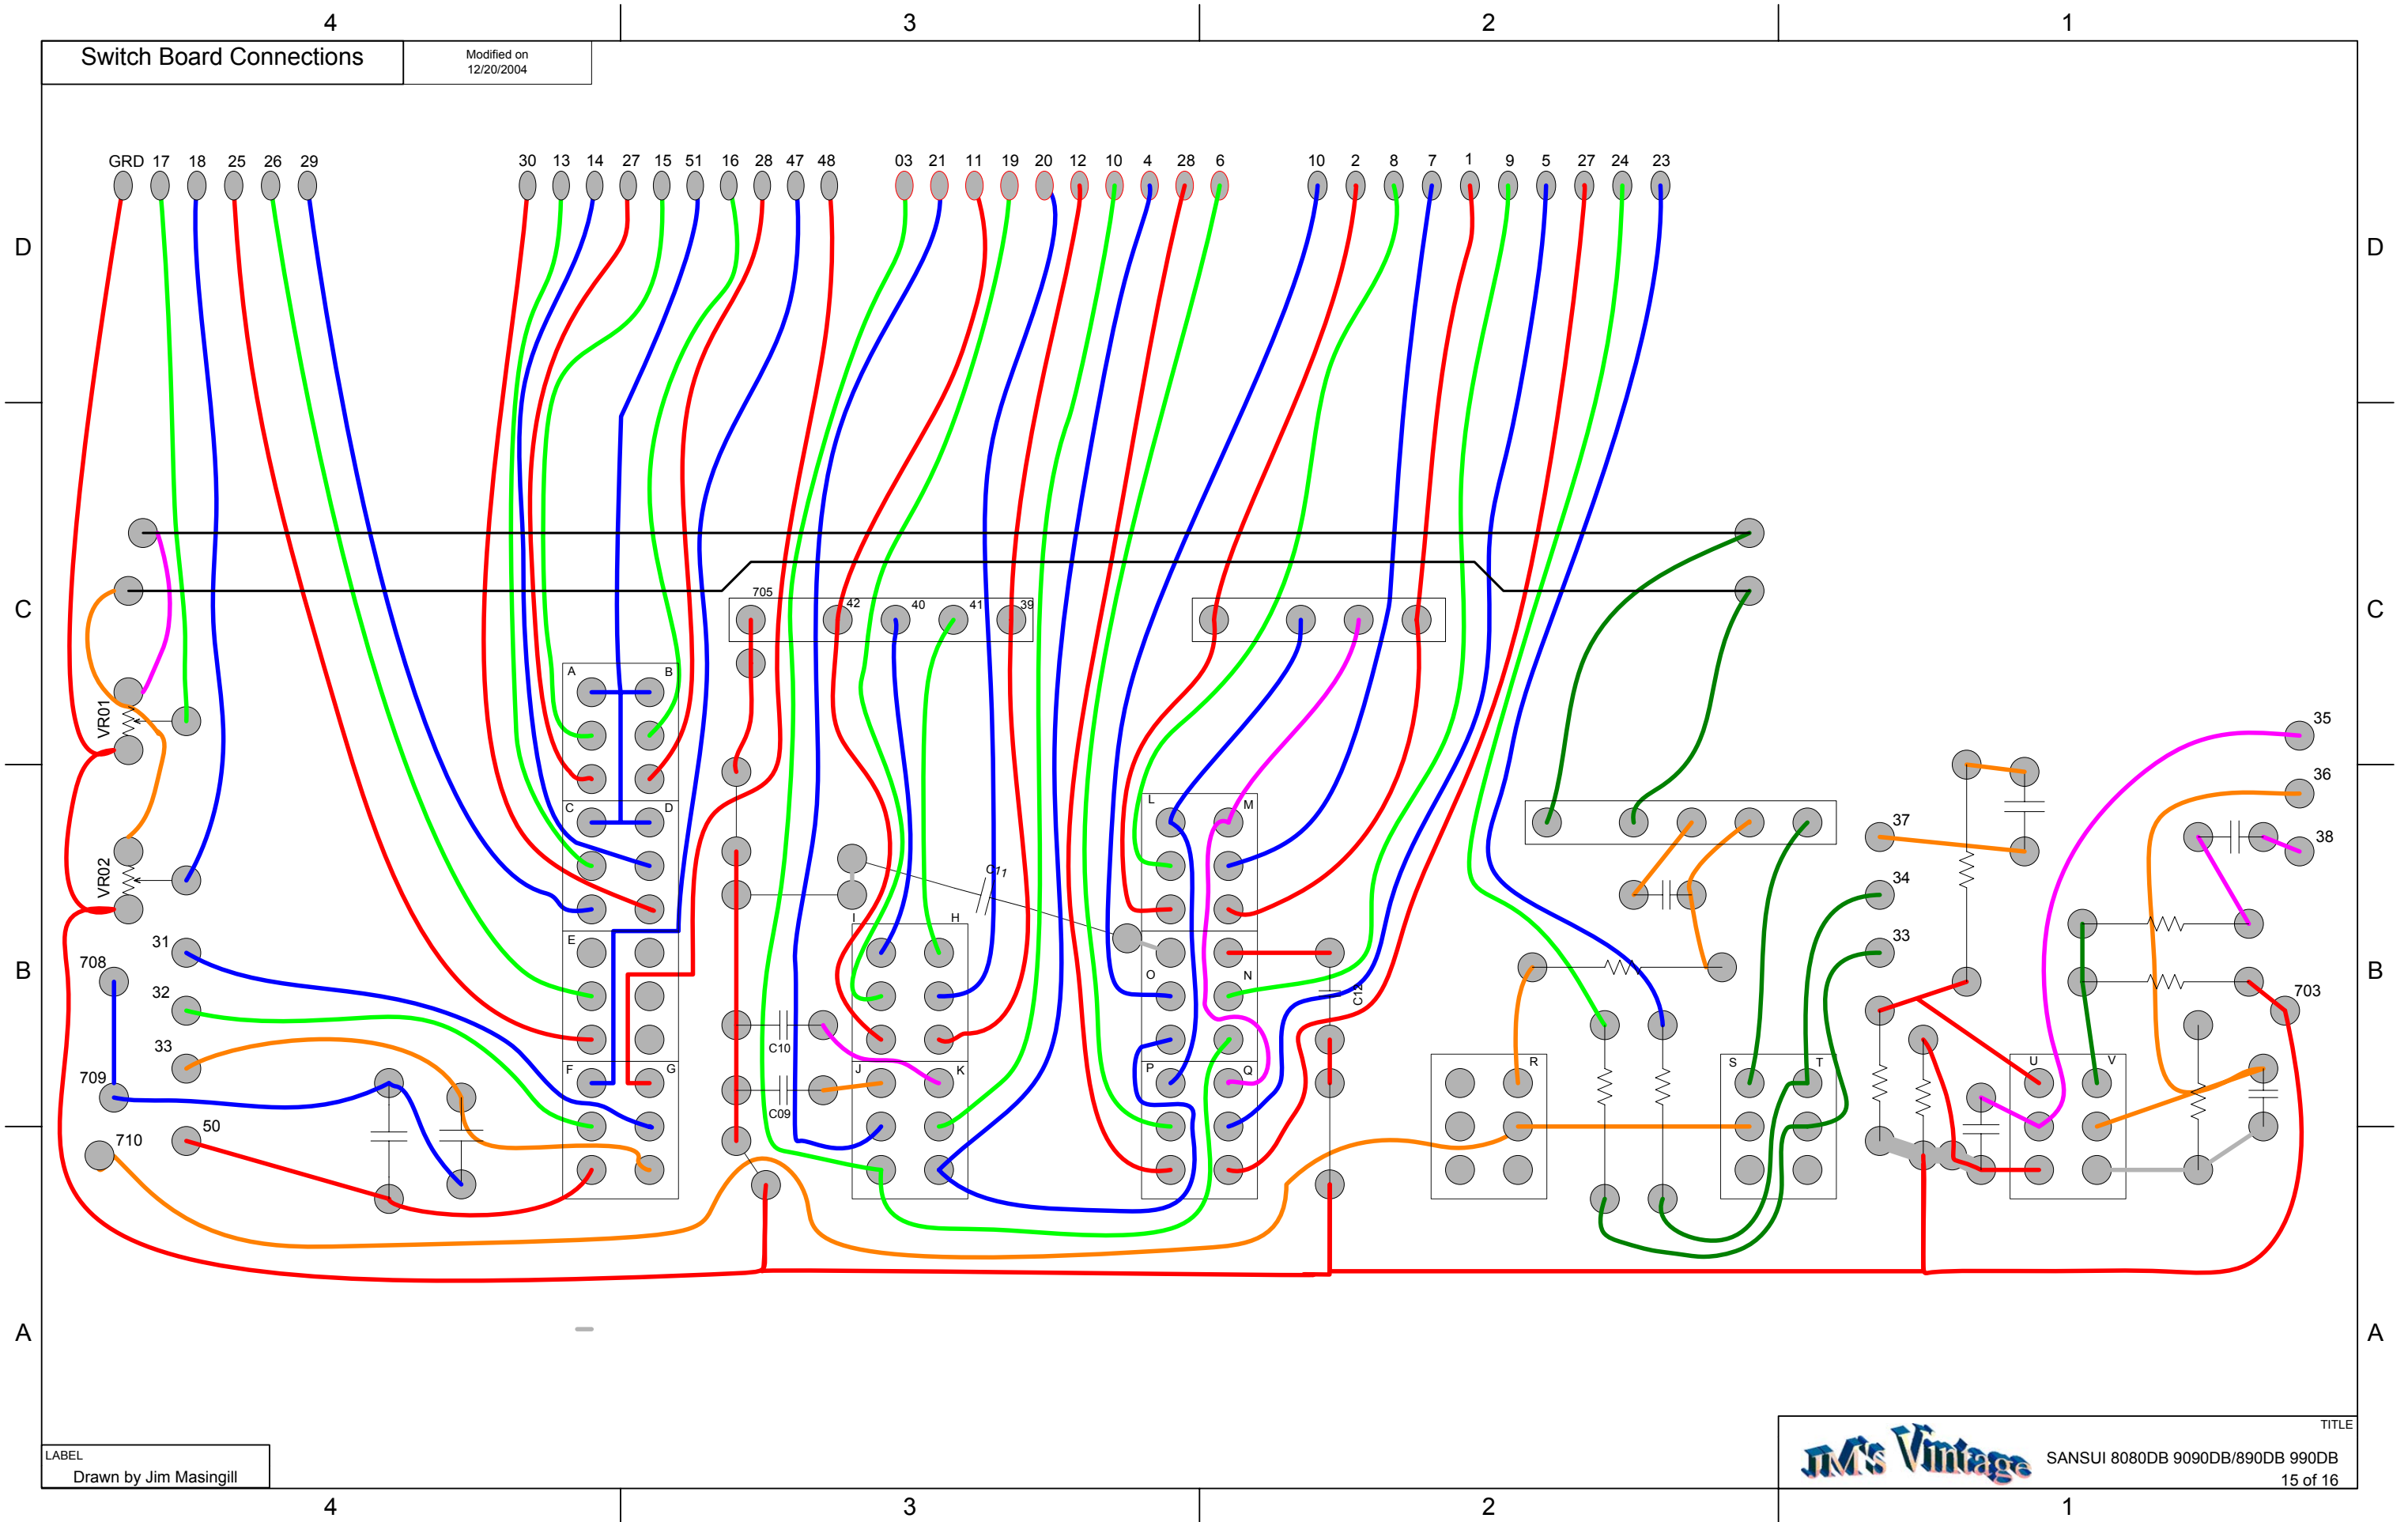

LABEL
Drawn by Jim Masingill



TITLE
SANSUI 8080DB 9090DB/890DB 990DB
15 of 16

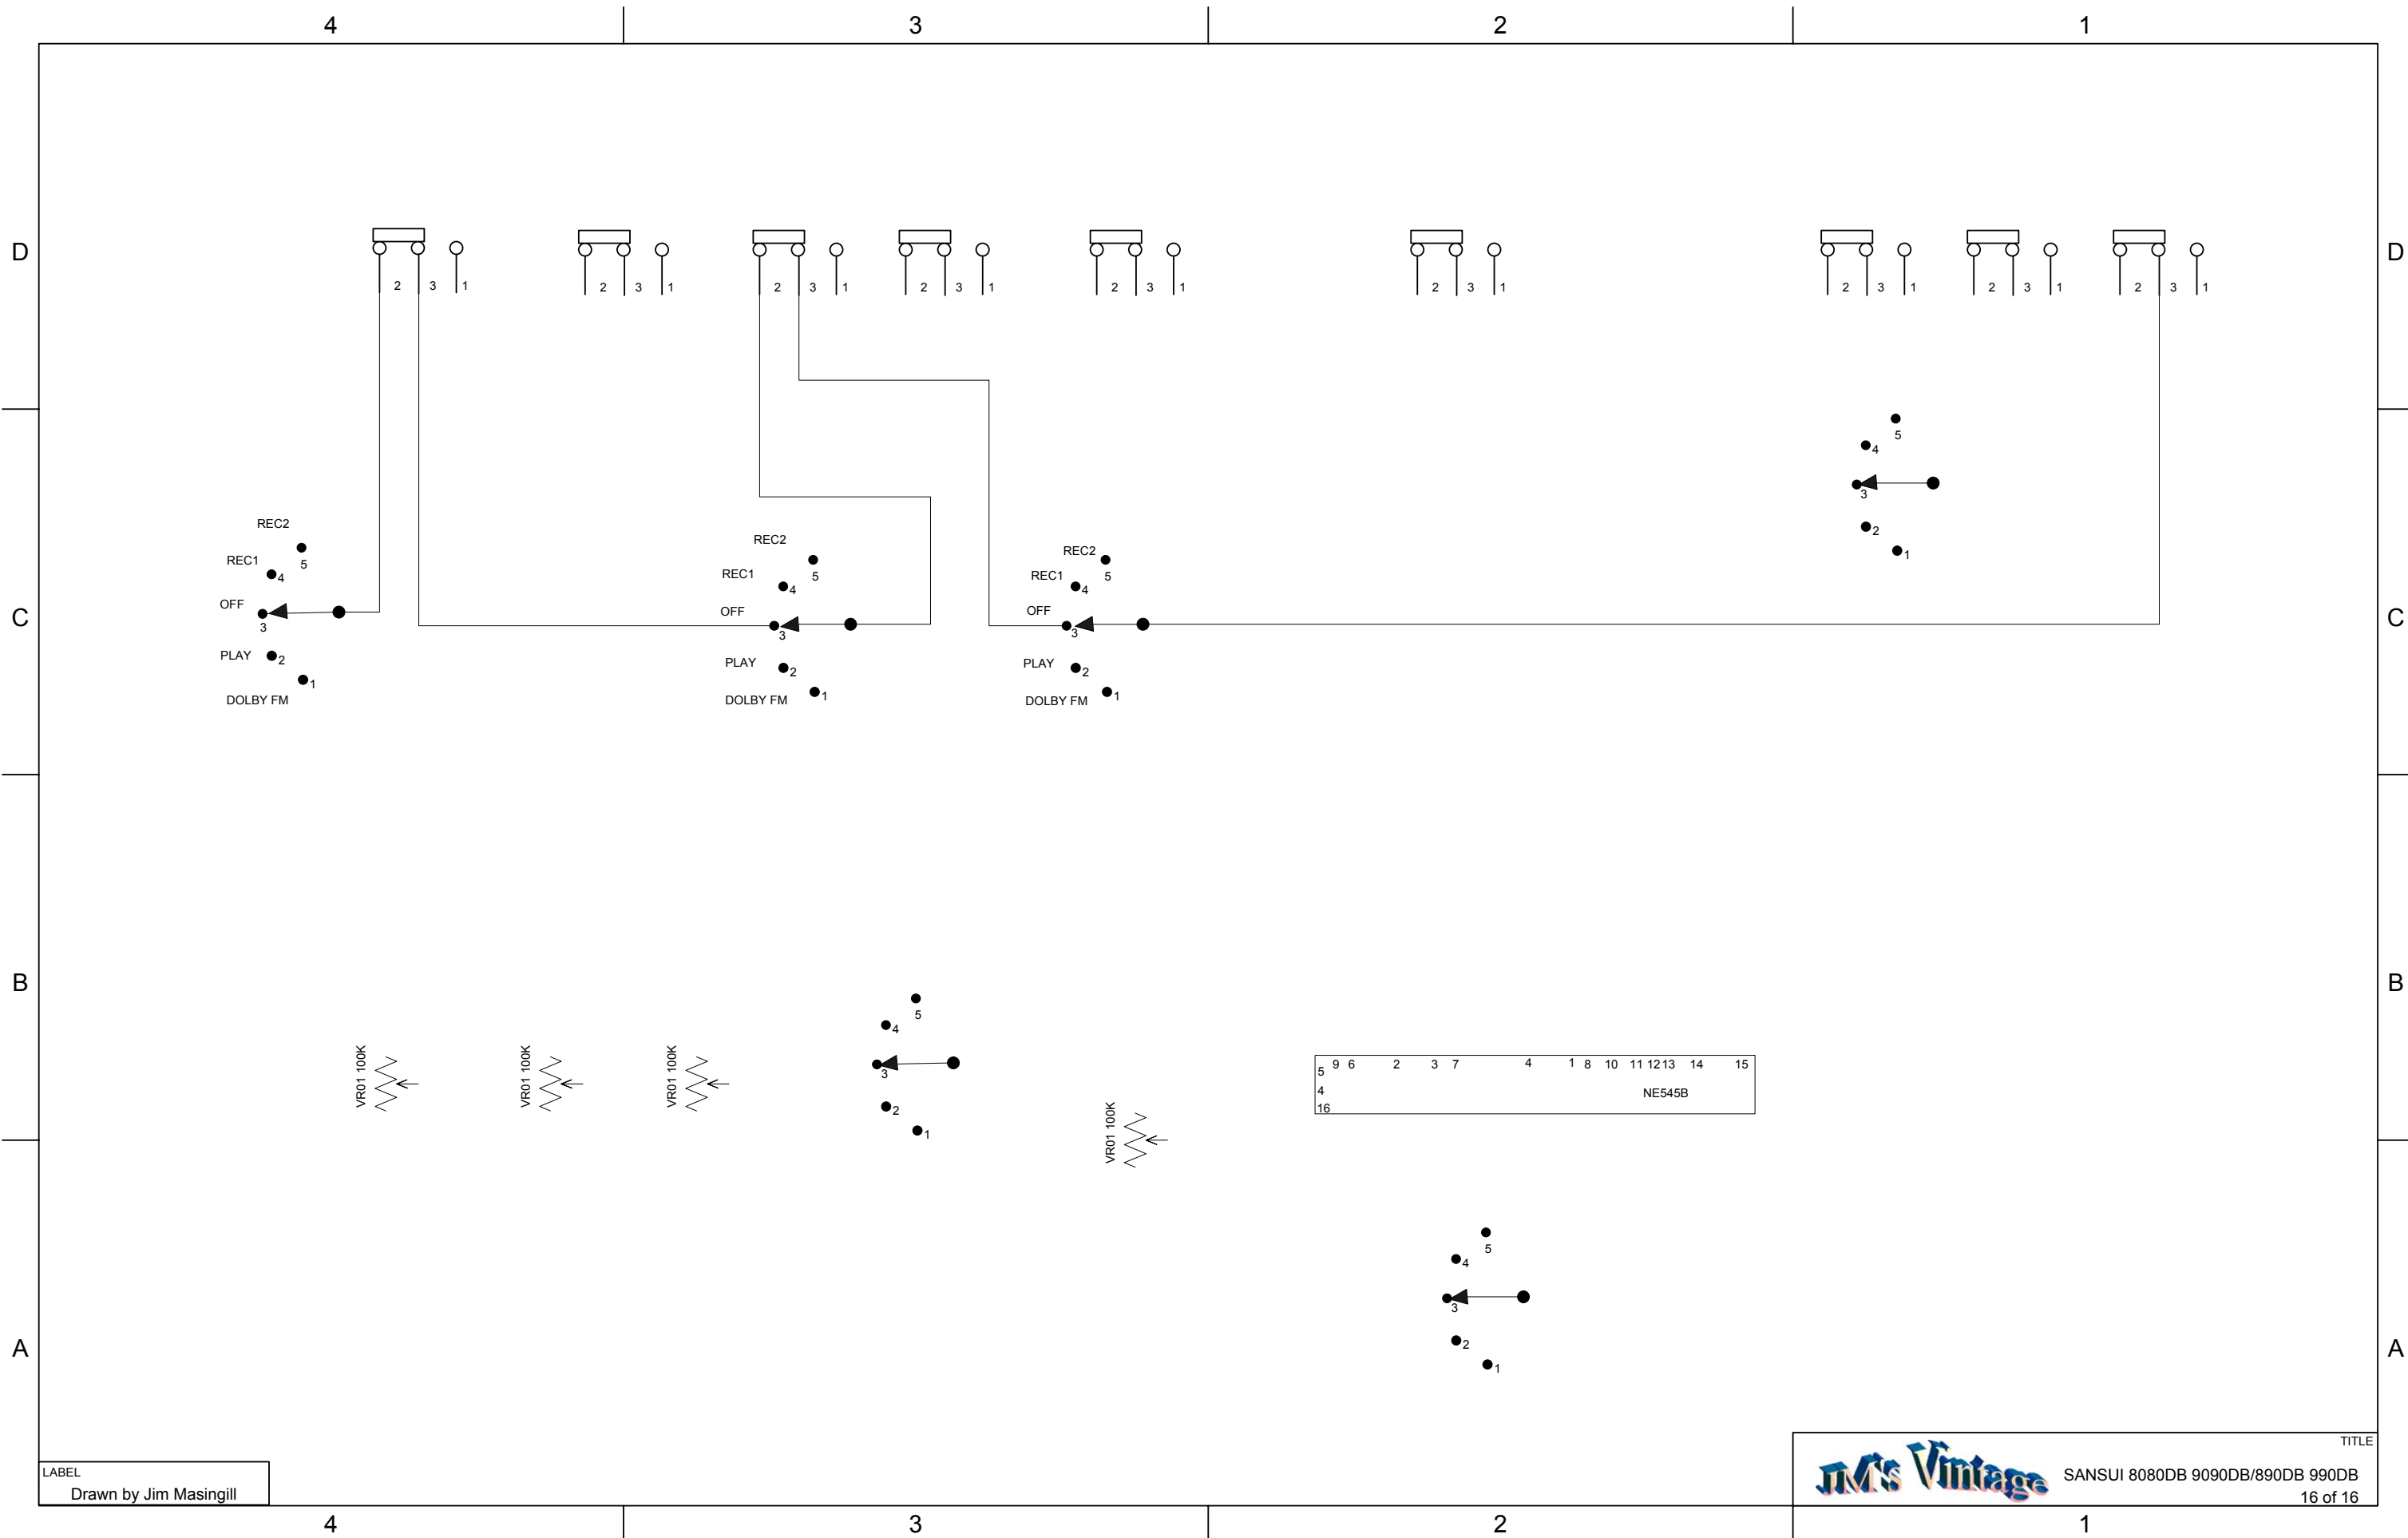

LABEL
 Drawn by Jim Masingill