
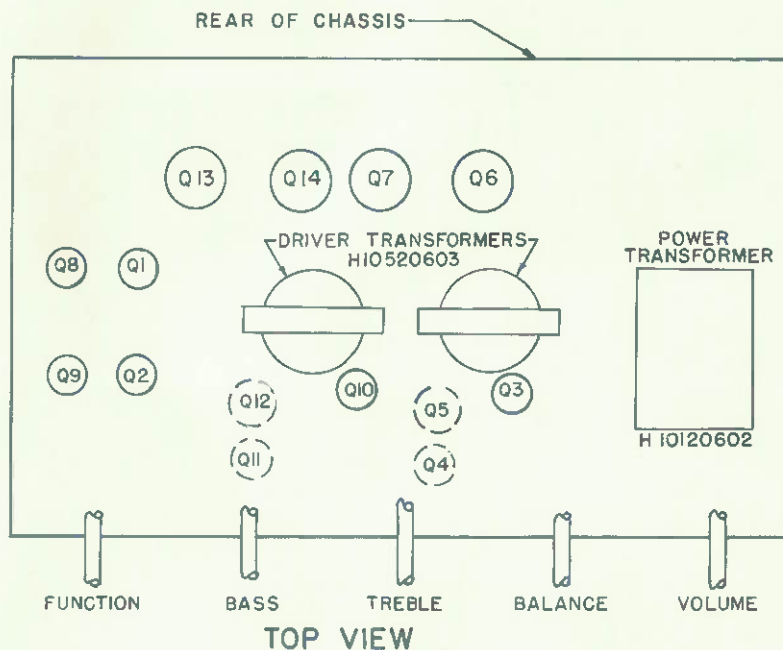


- NOTES
1. ALL RESISTORS IN OHMS UNLESS FOLLOWED BY K (1,000) OR M (1,000,000).
 2. ALL RESISTORS 1/2 WATT EXCEPT AS NOTED.
 3. ALL CAPACITORS IN MICRO-MICROFARADS UNLESS FOLLOWED BY UF (MICROFARADS).
 4. ALL INDUCTORS IN MICROHENRIES UNLESS FOLLOWED BY MH (MILLIHENRIES) OR H (HENRIES).
 5. ALL VOLTAGES TAKEN WITH ZERO SIGNAL.

MODEL SA2000
 H 90720903
 RUN * 048

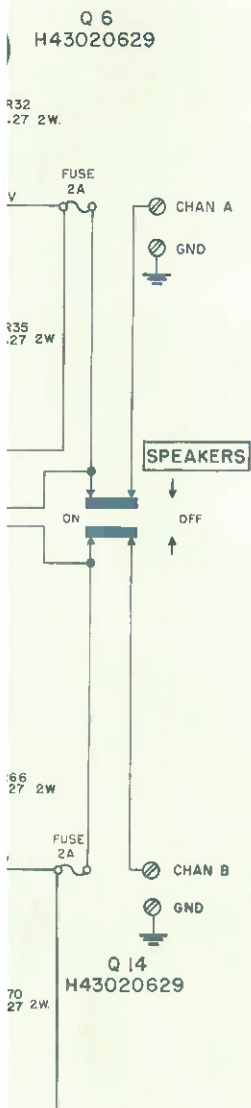

REPLACEMENT PARTS LIST — SA2000

PART NUMBER	DESCRIPTION	LIST PRICE
H65410619	Phono Jack	.10
H66016206	Transistor Socket	.15
H65410901	Fuse Holder	.85
H53012756	Line Cord	.60
C65416751	AC Convenience Outlet	.35
H61220798	Pilot Light Socket	.25
H46512117	Pilot Light #1847	.20
H63020774	Escutcheon	11.00
H60120775	Cage	8.40
H60120777	Rear Panel	2.50
H63220286	Knob, Medium	.70
H24520521	Slide Switch	.35
H22020534	Bass Control	1.95
H22020534	Treble Control	1.95
H22020533	Balance Control	2.25
H24020536	Function Switch	2.35
H24020532	Loudness Control	4.25
H10120602	Power Transformer	11.20
H10520603	Driver Transformer	4.10
H31120608	Electrolytic 2000 MFD 20V	2.40
H31320397	Electrolytic 400/50V, 1000/40V, 200/35V	3.05
H31520461	Electrolytic 2 MFD/25V Non-Polarized	.75
H41020618	Diode 2 Amp — 100V	1.50
H41013566	Diode .75 Amp — 100V	1.75
H43020629	Transistor	3.00
H43020480	Transistor	3.00
H43020731	Transistor	2.60
H43020481	Transistor	3.00
H43020754	Transistor	3.00
H36520516	0.27 Ohm 2 Watt 10% Resistor	.20
H45013895	Fuse 2½ Amp	.15
H90720801	Instruction Book	2.50

NOTE: To speed handling of your order be sure to include both the model and serial numbers which appear at the back of the chassis, in addition to the quantity, part number and part description of the items ordered. Orders from independent dealers, independent servicemen, and retail customers will be shipped on a C.O.D. basis except for orders \$1.00 or less, for which remittance should be enclosed. Prices subject to change without notice. Harman-Kardon reserves the right to substitute equivalent parts for those originally installed in this chassis.